




HOOD SHIELD INSTALLATION and CLEANING


I - Sheet Number STMPDBF14 Rev.A

- Open hood.
- 2. Locate the black frame that attaches to grill. Remove (4) hex screws that attaches the frame to the underside hood.
- 3. Locate the hex screw studs along the underside that attaches the top of the grill to the hood. Loosen, but do not totally remove the screws.
- 4. Lower the hood, and pivot the grill forward to create a 1/8" (.32 cm) gap between hood and grill. (See detail below)
- 5. Silde the hood shield between the hood and grill and center. Replace and retighten previously loosened hex screws.
- **6. Fender Protector Intallation:** Remove side marker light by removing the (1) screw directly underneath the light and sliding light forward.
- 7. Place (1) bump-on on the leading edge of the fender above headlight 9.5" from edge of grill. (See detail below)
- 8. Slide the headlight tab behind the main headlight assembly.
- 9. Tab should be positioned snugly behind headlight assembly. (See detail below)
- 10. It is necessary to expose the sheet metal flange of the hood by releasing the rubber seal nearest the grill. Discard the (2) plastic fasteners.
- 11. Secure rubber seal and deflector to sheet metal flange using self tapping screws. **NOTE:** Do not overtighten. (See detail below)
- 12. Replace side marker light and secure with previously removed screw. Repeat procedure for opposite side.

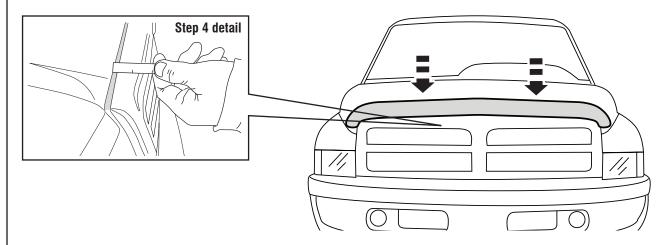

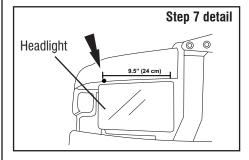

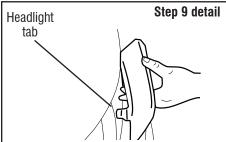

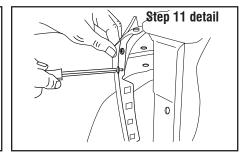

IMPORTANT: Before driving, ensure the hood shield is properly secured to vehicle. Clean with a **SOFT** cloth and soap and water ONLY! Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.